

## KSi Seed Count Controller

1. **Home**
2. **Scale Setup**
  - a. Setup Scale Capacity
  - b. Select Seed Amount
    - i. LBS/LBS
    - ii. 50LBS per Unit
    - iii. 140,000 per Unit
3. **Bin Setup**
  - a. Setup Bin Parameters
  - b. Run Auto Set
    - i. Sets a Preact and Discharge Rate
4. **Bin Select**
  - a. Select the desired bin and Seed ID will transfer to Home Screen
5. **Running Order**
  - i. Input desired amount ordered
  - b. Master Start
    - i. Bin gate opens and scale will fill to the desired weight
  - c. Scale Fill
    - i. Scale will fill until the control target is met
    - ii. Allow enough time for conveyors to completely clean out
6. **Print Ticket**
  - a. Print ticket before opening the scale gate
7. **Scale Gate Open**